




DA-LITE SCREEN COMPANY, INC.
 3100 North Detroit Street
 Post Office Box 137
 Warsaw, IN 46581-0137
 Phone: 574.267.8101
 Toll Free: 800.622.3737
 Fax: 574.267.7804
 www.da-lite.com
 info@da-lite.com

Ceiling Mount Pipe Stabilizer CM-PS

Form E-362
 Rev. 11 / 08

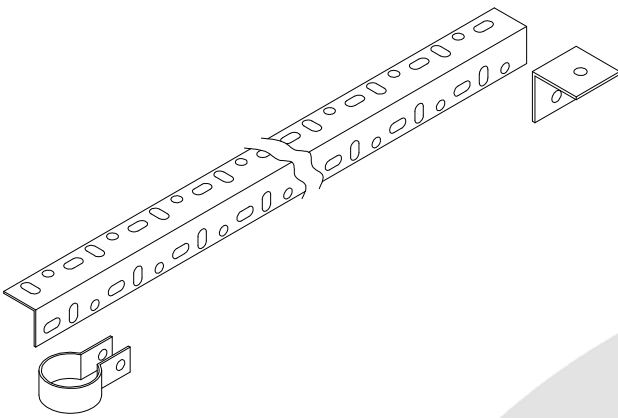



Caution: This product is designed for ceiling installation only. Qualified personnel using the appropriate fasteners should mount the Pipe Stabilizer. The surface to which this unit is mounted must be capable of supporting a static load of four times the combined weight of the projector and mount. Do not attach to plaster or drywall alone.

Required Tools:

- 7/16" wrench
- 9/16" wrench
- Phillips screwdriver

Procedure

1. Remove contents from carton and examine for damaged or missing parts.

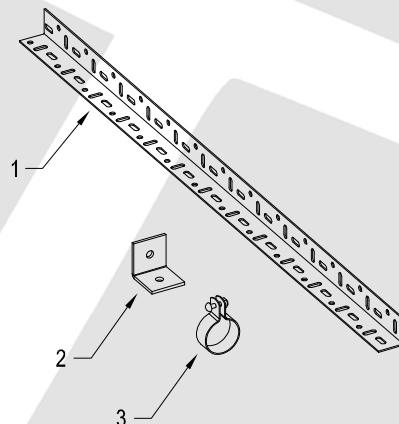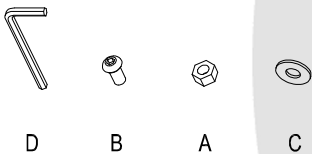

ITEM	DESCRIPTION	QTY
1	ANGLE	2
2	BRACKET, ANGLE	1
3	RING HANGER, 1-1/2 PIPE	1
	PACKAGE SET	1
A	NUT, HEX 1/4"-20 KEPS	4
B	SCREW, BHSCS 1/4"-20 X 3/4"	3
C	WASHER, FLAT 1/4"	7
D	WRENCH, ALLEN 5/32	1

2. Due to the various ceiling constructions, careful consideration should be given to the selection and use of fasteners. For a listing of available fastener kits refer to the chart below.

Ceiling Construction	Fastener Kit Model Number	Hole Size
Concrete	A101 (3/8" cap screws and hollow set drop-in anchors)	5/8"
Wood Joist	A105 (3/8" lag screws)	3/16"
Metal Joist	A111 (3/8" cap screws and nuts)	7/16"

3. Wrap the Ring Hanger around the vertical pipe (that is attached to the structural ceiling) and attach one end of a Slotted Angle to the outside of the Ring Hanger. See Figure 1. Do not tighten at this time.
4. Attach the Angle Bracket to the end of the other Slotted Angle.
5. Overlap the two Slotted Angles a minimum of 12" and secure together.
6. Readjust the location of the Ring Hanger to align the position of the pipe and tighten all of the fasteners. It may not be necessary to use both Slotted Angles in your application.

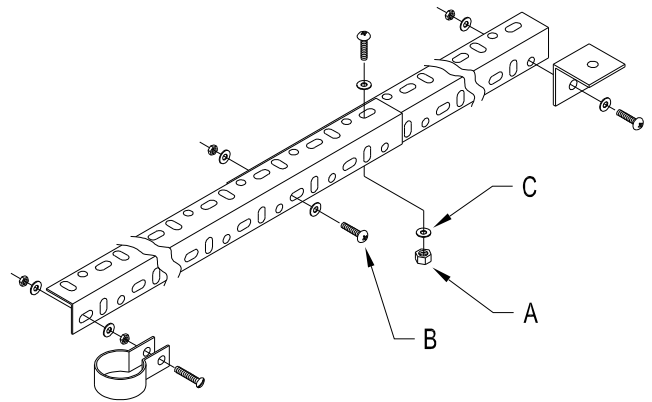


Figure 1